
REECOM MODEL R-1630
WEATHER RADIO
PROGRAMMING GUIDE

REECOM MODEL R-1630

This S.A.M.E. (Specific Area Message Encoding) Weather Radio provides you with information about the weather/hazard conditions in your immediate area.

BATTERY INSTALLATION

Your weather radio requires four (4) 1.5 volt AA size batteries for back-up power when AC power fails.

Use **ONLY** 4 Fresh 1.5 volt AA size **ALKALINE** batteries. **DO NOT** use rechargeable batteries.

Slide the battery door (located on the bottom of the radio) downward and remove it.

Insert four AA batteries with the correct polarity as indicated by the + and – symbols inside the compartment.

Replace the battery compartment door.

LOCATION OF THE WEATHER RADIO

Put the radio **IN OR NEAR A WINDOW** and extend the telescoping antenna . Do not place the radio on or near other electronic equipment (Computer, Monitor, etc.).

SET THE DATE AND TIME

Make sure the radio is off before you begin **If you can hear static or a voice, the**

radio is on. Press the STOP button to turn the radio off. NOTE: When the radio is off, the display will still be on.

Press and hold the **ENTER** button until you hear a beep. SET CLOCK should appear on the display.

Press **ENTER**. The hour should flash on and off. Use the + and – buttons to set the hour.

Press  The minutes should flash. Use the + and – buttons to set the minutes.

Press **ENTER**. Then press . SET DATE will show on the display.

Press **ENTER**. The month should flash on and off . Use the + and – buttons to select the current month.

Press  . The day should flash. Use the + button to select the day.

Press  The year should flash. Use the + button to select the year.

Press **ENTER**. The display will show SET DATE. Press the **PROG** button to exit.

PROGRAM THE RADIO

Make sure the radio is off before you begin programming. **If you can hear static or a voice, the radio is on. Press the STOP button to turn the radio off. NOTE:**

When the radio is off, the display will still be on.

Press and hold the **PROG** button until you hear a beep. The display should now read ALERT MODE.

Press **ENTER**. ALERT ENABLE flashes on the bottom of the display screen.

Press **ENTER**. VOICE will flash on the display. Press **ENTER** again. The display will now show ALERT MODE

Press  until you see CHANNEL SELECT on the display.

Press **ENTER** . Use the  button until you see CH2 on the display. You should now be able to hear NOAA Weather Radio broadcast coming from the radio.

Press **ENTER**. Then press the  button. ENTER COUNTY should show on the display. Press **ENTER**. SINGLE COUNTY will flash on and off . Press **ENTER**.

Two numbers should now be flashing on the display. Use the + and – keys to select **04**.

Press the  button. The next two numbers on the display should flash. Use the + and – keys to select **50**.

Press the  button. The next two numbers on the display should flash. Use the + and – keys to select **91**.

Press **ENTER**. Then press
PROGRAM.

Your weather radio is now ready to go!

To Listen to the
NOAA Weather Radio

Press the **RADIO** button. You should
now hear the weather information coming
from the speaker on your weather radio.

To turn the weather off, press **STOP**.